


## Adapter for Logitech G25/27 Pedals to Thrustmaster T500RS/TX Wheel



Congratulations on your purchase of the Ricmotech T500W2G27P adapter for connecting the Logitech® G25/G27 pedals to the Thrustmaster® T500RS, T300 or TX wheel.


1. Before switching from the original pedals to the Logitech® pedals, turn off or unplug the wheel from the PC, PlayStation or Xbox to clear the calibration settings it may have stored for the pedals.
2. Connect the adapter as shown in the image below.
3. Plug the wheel back into your PC or console and wait for the wheel to perform its centering routine.
4. Press each pedal all the way then release to fully calibrate the pedals prior to use.

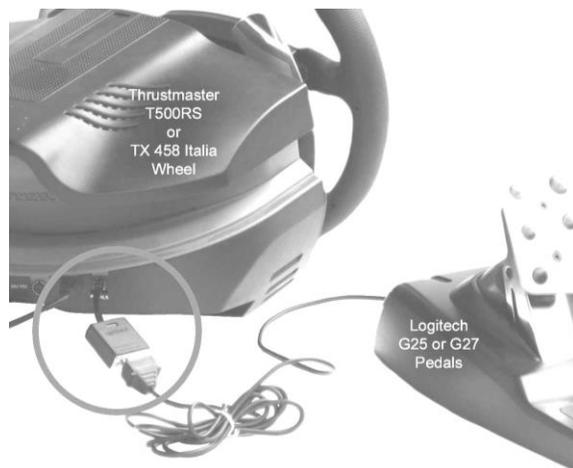

### For Load Cell Kits:

If your Logitech® pedals have the Ricmotech LC27 load cell kit installed, you must open the pedal assembly and invert the black and red connections on the load cell as shown below.

If your pedals have the LC27-2 load cell kit, then you must replace the interface board from the load cell kit with the LC27NI interface board (sold separately) for the pedals to operate properly.

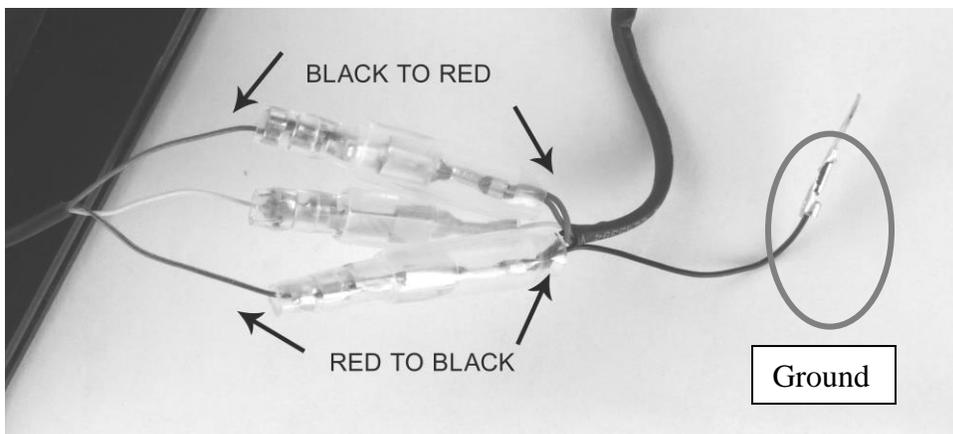

### TROUBLESHOOTING

If the gas and clutch pedal are inverted: Press and hold the MODE button for 3 seconds then release to change the indicator light to red.

If your wheel shuts off when the pedals are plugged in then try removing the pedals from your rig so they do not share a metal ground. If this works you must disconnect the three internal ground wires inside the Logitech pedals insulate with tape. Reattach your pedals to the rig and everything should work.

---

Notice: Ricmotech is not responsible for any damage resulting from connecting your Logitech® pedals to your Thrustmaster® wheel. Ricmotech has not tested any other load cell kit with this adapter. Every T500W2G27P is tested for proper operation before being sent out.

### Need Help?

If you run into any problems during the installation or configuration process, please contact us directly at tech support at (305) 417-9241 or via email at [mail@ricmotech.com](mailto:mail@ricmotech.com).

Copyright 2015, Ricmotech LLC. Thrustmaster® TX Wheel and T500RS are trademarks of the Guillermot® corporation and Logitech®, G25 and G27 are trademarks of the Logitech® companies. These terms are used for reference purposes only. Ricmotech and the T500W2G27P is not affiliated with Thrustmaster® or Logitech®